



Home > Products > ProX Stands > Lighting Truss & Crankstands > 18 Ft. Lighting Crank Truss Stand 330 Lbs.Capacity Includes T-Adapter Truss Mount

SKU: XT-CRANK18FT-330

Permalink: <http://www.proxdirect.com>

[Search on Google](#)

18 Ft. Lighting Crank Truss Stand 330 Lbs.Capacity Includes T-Adapter Truss Mount

[Find A Dealer](#)

Product Images



[Download Product Images](#)

Our Products And You

[Submit your story](#)

ProX XT-CRANK18FT-330 18 Ft. Lighting Crank Truss Stand 330 Lbs.Capacity Includes T-Adapter Truss Mount

Description

The **ProX XT-CRANK18FT-330 Heavy Duty Crank Stands** are an integral part of the Truss SQ System for temporarily mounting lights for small to medium-sized DJ lighting at any event. It has Integrated casters, independently adjustable leg braces, and nylon guided leg sliders, which can all be used in conjunction with another same-rated stand, & trusses and T-Adapters (sold separately). Each is made with Heavy Duty All-metal components; Sturdy, steel/aluminum construction. Eliminate direct lifting and lowering of heavy loads with the ProX Truss Heavy Duty Crank Stand.

It folds easily to a portable size for transport. It's equipped with a smooth, heavy-duty cranking mechanism. Perfect for a live band and mobile DJ applications, eliminate direct lifting and lowering of heavy loads.

This stand, in conjunction with another **XT-Crank18FT-330** stand & any length truss with T-Adapters [XT-TADAPTER-U](#) allows you to mount and raise your lights to a maximum of 18ft. A combined system of two will support a maximum weight of 660 lbs.

Features

- **Max Vert Load: 330 lbs.**
- **Base Diameter: 83.85" / 7FT**
- **Item Weight: 140 lbs.**
- **Min Height: 86"**
- **Base Closed: 16" x 15"**

Basic Usage:

1. Ensure that the stand is positioned on hard stable surface, in suitable location, on firm ground and clear of overhead obstacles.
2. Stabilize legs before lifting the tower or any load.
3. When outdoors, secure the tower with braces or cables, in case of wind.
4. Check the cable, it should not show damaged or flattened areas nor broken strands.

Using the Winch:

1. For Lifting the tower, turn the winch handle clockwise.
2. For lowering the tower, turn the winch handle counter-clockwise.

Safety Notes:

1. Loading on truss and stands should comply with rated weights.
2. Lock all the safety mechanisms (safety pins, knobs)
3. Loads must be centered & balanced on each lifting unit.
4. Safety chains must be installed on each item attached to unit.
5. Leave a safety perimeter with a radius 5ft greater than the maximum height of the stands during lifting and lowering of loads.
6. During transport, close all the sections and lock the lifting carriage.
7. Do not attempt to move the stand when loaded or in extended position.

Service Notes:

1. Servicing and repairs must be made by qualified persons.
2. Cable, pulleys and telescopic masts must be inspected before each use. Any damaged cable must be replaced immediately.
3. Annual inspection by an authorized technician is suggested.

Exterior Dimensions & Weight

18.00"H x 18.00"W x 87.00"L - Weight: 165.00 lbs

Suggested Shipping Method: LTL

Shipping Dimensions for (2) Units
48Dx40Wx92H 365 lbs

UPC

741459147518

Our Products and You

Submit your
story

Commonly Asked Questions

+ Where can I buy one?

[submit a question](#)

Customer Testimonials

What did you think

Related Products



Set of (2) 17 in. Universal T-Adapter Brackets for F34/F33/F32 Triangle Square Truss Segments

SKU: XT-TADAPTER-U



XT-CRANK22FT-400 Heavy Duty 22 Ft. High Truss Crank Up Lighting Stand 400 Lbs. Capacity Includes T-Adapter Truss Mount

SKU: XT-CRANK22FT-400



9.84 Ft - 3.00 M F34 Square Truss Segment | 2 mm Wall

SKU: XT-SQ984



6 Way Square Truss Junction Block - Includes 4 Way 16 Half Conical Couplers

SKU: XT-JB6W-4W
